



# BARNES®

## INSTALLATION and OPERATION MANUAL Self-Priming Centrifugal Pumps

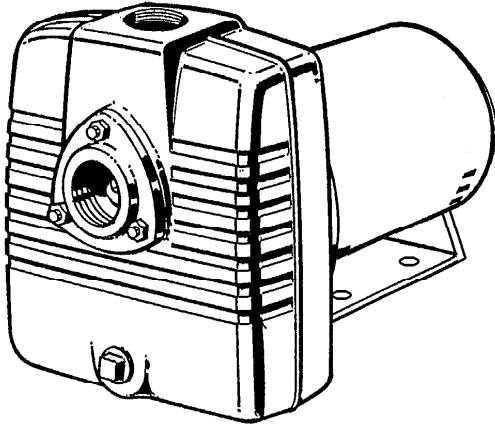

### Electric Drive Models:

3CCE, 3CCE-1  
4CCE, 4CCE-1  
5CCE, 5CCE-1  
10CCE, 10CCE-1  
15CCE  
20CCE  
25CCE

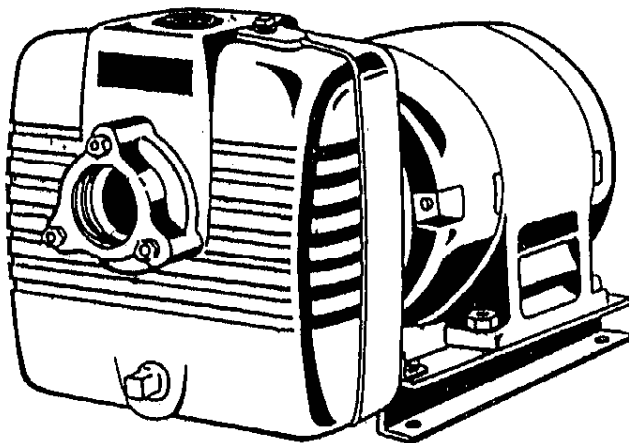

### IMPORTANT!

*Read all instructions in this manual before operating pump.*

*As a result of Crane Pumps & Systems, Inc., constant product improvement program, product changes may occur. As such Crane Pumps & Systems reserves the right to change product without prior written notification.*

**CRANE**

A Crane Co. Company

## PUMPS & SYSTEMS

420 Third Street  
Piqua, Ohio 45356  
Phone: (937) 778-8947  
Fax: (937) 773-7157  
www.cranepumps.com

83 West Drive, Bramton  
Ontario, Canada L6T 2J6  
Phone: (905) 457-6223  
Fax: (905) 457-2650

Form No. 022567-Rev. V

# TABLE OF CONTENTS

SAFETY FIRST .....	3
A. PUMP SPECIFICATIONS .....	4 - 8
B. GENERAL INFORMATION .....	9
C. INSTALLATION .....	9
D. OPERATION .....	9 - 10
E. PUMP SERVICE and REPAIR .....	10
F. REPLACEMENT PARTS.....	10
TRUBLE SHOOTING .....	11
CROSS-SECTION, 3CCE - 5CCE .....	12
EXPLODED VIEW, 3CCE - 5CCE .....	13
PARTS LIST, 3CCE - 5CCE .....	14
CROSS-SECTION, 10CCE, 10CCE-1 .....	15
EXPLODED VIEW, 10CCE, 10CCE-1 .....	16
PARTS LIST, 10CCE, 10CCE-1 .....	17
CROSS-SECTION, 15CCE, 20CCE, 25CCE .....	18
EXPLODED VIEW, 15CCE, 20CCE, 25CCE .....	19
PARTS LIST, 15CCE, 20CCE, 25CCE .....	20
RETURNED GOODS POLICY.....	21
WARRANT .....	22
START-UP REPORT .....	23 - 24
WARRANTY REGISTRATION	

# SAFETY FIRST!

Please Read This Before Installing Or Operating Pump.  
This information is provided for **SAFETY and to PREVENT EQUIPMENT PROBLEMS**. To help recognize this information, observe the following symbols:



**IMPORTANT!** Warns about hazards that can result in personal injury or Indicates factors concerned with assembly, installation, operation, or maintenance which could result in damage to the machine or equipment if ignored.

**CAUTION !** Warns about hazards that can or will cause minor personal injury or property damage if ignored. Used with symbols below.

**WARNING !** Warns about hazards that can or will cause serious personal injury, death, or major property damage if ignored. Used with symbols below.



*Hazardous fluids can cause fire or explosions, burnes or death could result.*



*Extremely hot - Severe burnes can occur on contact.*



*Biohazard can cause serious personal injury.*



*Hazardous fluids can Hazardous pressure, eruptions or explosions could cause personal injury or property damage.*



*Rotating machinery Amputation or severe laceration can result.*



*Hazardous voltage can shock, burn or cause death.*



*Toxic Fumes - Breathing can cause nausea, fainting or death*



*Eye protectiong required*

Only qualified personnel should install, operate and repair pump. Any wiring of pumps should be performed by a qualified electrician.



**WARNING !** - To reduce risk of electrical shock, pumps and control panels must be properly grounded in accordance with the National Electric Code (NEC) or the Canadian Electrical Code (CEC) and all applicable state, province, local codes and ordinances. Improper grounding voids warranty.



**WARNING!** - To reduce risk of electrical shock, always disconnect the pump from the power source before handling or servicing. Lock out power and tag.



**WARNING!** Operation against a closed discharge valve will cause premature bearing and seal failure on any pump, and on end suction and self priming pump the heat build may cause the generation of steam with resulting dangerous pressures. It is recommended that a high case temperature switch or pressure relief valve be installed on the pump body.



**CAUTION!** Pumps build up heat and pressure during operation-allow time for pumps to cool before handling or servicing.



**WARNING!** - **DO NOT** pump hazardous materials (flammable, caustic, etc.) unless the pump is specifically designed and designated to handle them.



**CAUTION!** - Do not block or restrict discharge hose, as discharge hose may whip under pressure.



**WARNING!** - **DO NOT** wear loose clothing that may become entangled in the impeller or other moving parts. Always wear appropriate safety gear, such as safety glasses, when working on the pump or piping.



**WARNING!** - Keep clear of suction and discharge openings. **DO NOT** insert fingers in pump with power connected.



Make sure lifting handles are securely fastened each time before lifting. **DO NOT** operate pump without safety devices in place. Always replace safety devices that have been removed during service or repair. Secure the pump in its operating position so it can not tip over, fall or slide.

**DO NOT** exceed manufacturers recommendation for maximum performance, as this could cause the motor to overheat.



**WARNING!** Cable should be protected at all times to avoid punctures, cut, bruises and abrasions - inspect frequently. Never handle connected power cords with wet hands.

**WARNING!** To reduce risk of electrical shock, all wiring and junction connections should be made per the NEC or CEC and applicable state or province and local codes. Requirements may vary depending on usage and location.



**WARNING!** Products Returned Must Be Cleaned, Sanitized, Or Decontaminated As Necessary Prior To Shipment, To Insure That Employees Will Not Be Exposed To Health Hazards In Handling Said Material. All Applicable Laws And Regulations Shall Apply.

Bronze/brass and bronze/brass fitted pumps may contain lead levels higher than considered safe for potable water systems. Lead is known to cause cancer and birth defects or other reproductive harm. Various government agencies have determined that leaded copper alloys should not be used in potable water applications. For non-leaded copper alloy materials of construction, please contact factory.



**IMPORTANT!** - Crane Pumps & Systems, Inc. is not responsible for losses, injury, or death resulting from a failure to observe these safety precautions, misuse or abuse of pumps or equipment.

**SECTION: A - PUMP SPECIFICATIONS: 3CCE, 4CCE, 5CCE**

**DISCHARGE** ..... 1½" (38mm) x 1½ (38mm) NPT , Female

**LIQUID TEMPERATURE** 160°F (71°C) Continuous

**INTERMEDIATE** ..... Cast Iron ASTM A-48, Class 30

**VOLUTE** ..... Cast Iron ASTM A-48, Class 30

**BODY** ..... Cast Iron ASTM A-48, Class 30

**PEDESTAL** ..... Cast Iron ASTM A-48, Class 30

**IMPELLER** *Design* ..... Semi-Open  
*Material* ..... Cast Iron ASTM A-48, Class 30  
 Dynamically Balanced, ISO G6.3

**SHAFT** ..... Stainless Steel

**SQUARE RINGS** ..... Buna-N

**HARDWARE** ..... 300 Series Stainless Steel

**PAINT** ..... Air dry enamel

**SEAL** *Design* ..... Mechanical  
*Lubrication* .... Self-Lubrication  
*Material* ..... Rotating Faces - Carbon  
 Stationary Faces - Ceramic  
 Elastomer - Buna-N  
 Hardware - 300 series stainless steel


**CHECK VALVE:**  
*Material* ..... Valve Flap - Neoprene  
 Weight - Cast Iron ASTM A-48, Class 30

**MOTOR:** *Design* ..... ODP, NEMA L, Single phase,  
 NEMA B, Three Phase Torque Curve,  
 C-Face, Footed, Squirrel Cage  
 Induction  
*Insulation* ..... Class B

**SINGLE PHASE** ..... Dual Voltage 115/230, capacitor start

**THREE PHASE** ..... 200-240/480 is Tri voltage motor.

**OPTIONAL EQUIPMENT:** Seal Material, TEFC motors

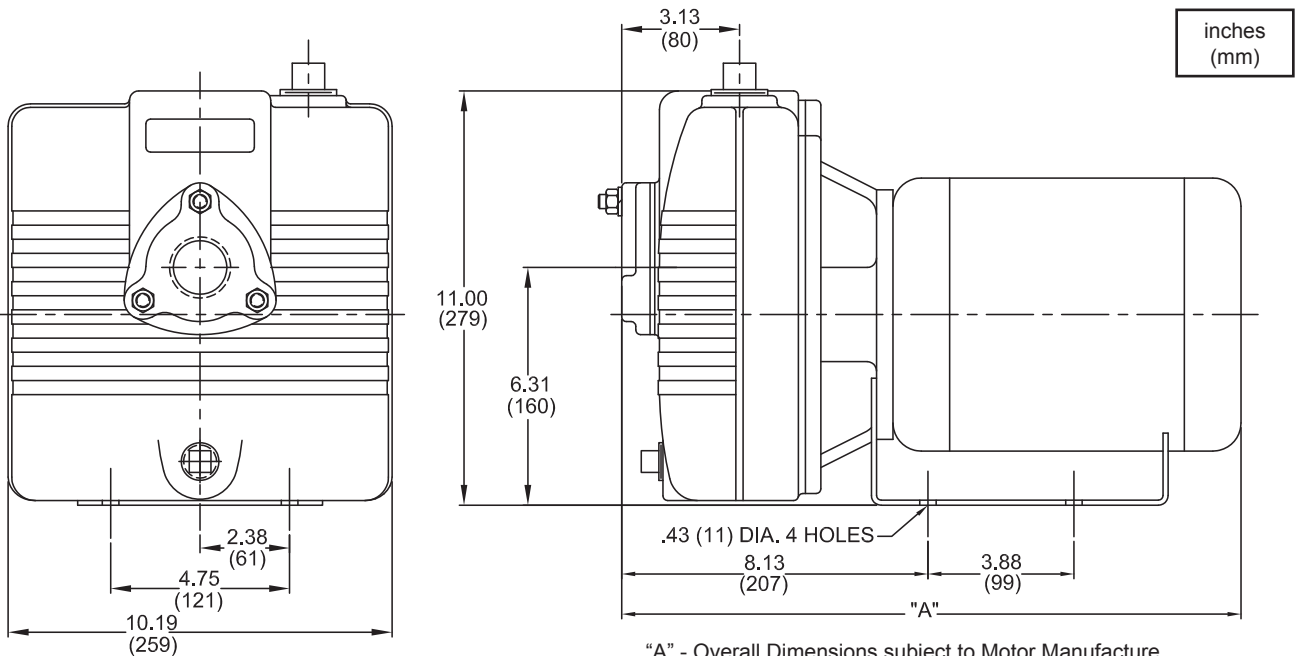

"A" - Overall Dimensions subject to Motor Manufacture

MODEL NO.	HP	VOLTS	PH	RPM (Nom)	ODP MOTOR DESIGN				TEFC MOTOR DESIGN		
					* A DIM	FULL LOAD AMPS	LOCKED ROTOR AMPS	WEIGHT NET LBS	* A DIM	FULL LOAD AMPS	LOCKED ROTOR AMPS
3CCE	1.5	200-230/460	3	3450	17.88 (454)	6.0/3.0	40/20	84	20.00 (508)	5-4.6/2.3	36/18
3CCE-1	1.5	115/230	1	3450	18.44 (468)	4.5/2.3	12/60	84	21.00 (534)	16.6/8.3	84/42
4CCE	2.0	200-230/460	3	3450	18.44 (468)	6.8/3.4	50/25	92	21.00 (534)	7-5.4/2.7	46/23
4CCE-1	2.0	115/230	1	3450	18.44 (468)	5.9/3.0	144/72	92	21.92 (557)	23/11.5	156/78
5CCE	3.0	200-230/460	3	3450	18.44 (468)	9.6/4.8	64/32	94	21.92 (557)	8.1-7.6/3.8	66/33
5CCE-1	3.0	115/230	1	3450	19.69 (500)	8.3/4.2	204/102	94	25.36 (644)	29/14.5	172/86

**IMPORTANT!**

- 1.) DO NOT USE FOR PUMPING FLUIDS WITH A FLASH POINT OF LESS THAN 100°F.
- 2.) MAKE CERTAIN THAT PUMP AND/OR MOTOR ASSEMBLY AND CONTROLS HAVE THE APPROPRIATE RATINGS FOR THE GIVEN APPLICATION AREA CLASSIFICATION (ie DIVISION I, AGENCY LISTING ETC.)

**SECTION: A - PUMP SPECIFICATIONS: 10CCE, 10CCE-1**

**DISCHARGE** ..... 2" (51mm) x 2" (51mm) NPT , Female

**LIQUID TEMPERATURE** 160°F (71°C) Continuous

**INTERMEDIATE** ..... Cast Iron ASTM A-48, Class 30

**VOLUTE** ..... Cast Iron ASTM A-48, Class 30

**BODY** ..... Cast Iron ASTM A-48, Class 30

**PEDESTAL** ..... Cast Iron ASTM A-48, Class 30

**IMPELLER** *Design* ..... Semi-Open  
*Material* ..... Cast Iron ASTM A-48, Class 30  
 Dynamically Balanced, ISO G6.3

**SHAFT** ..... Stainless Steel

**SQUARE RINGS** ..... Buna-N

**HARDWARE** ..... 300 Series Stainless Steel

**PAINT** ..... Air dry enamel

**SEAL** *Design* ..... Mechanical  
*Lubrication* .... Self-Lubrication  
*Material* ..... Rotating Faces - Carbon  
 Stationary Faces - Ni-Resist  
 Elastomer - Buna-N  
 Hardware - 300 series stainless steel


**SHAFT SLEEVE** ..... Bronze

**CHECK VALVE:**  
*Material* ..... Valve Flap - Neoprene  
 Weight - Cast Iron ASTM A-48, Class 30

**MOTOR:** *Design* ..... ODP, NEMA L, Single phase, NEMA B, Three Phase Torque Curve, C-Face, Footed, Squirrel Cage  
 Induction, Marine Duty per USCG259 and AIEEE-45, 50°C Ambient  
*Insulation* ..... Class B

**SINGLE PHASE** ..... Single Voltage 230,  
**THREE PHASE** ..... 200-240/480 is Tri voltage motor.

**OPTIONAL EQUIPMENT:** Seal Material, TEFC motors

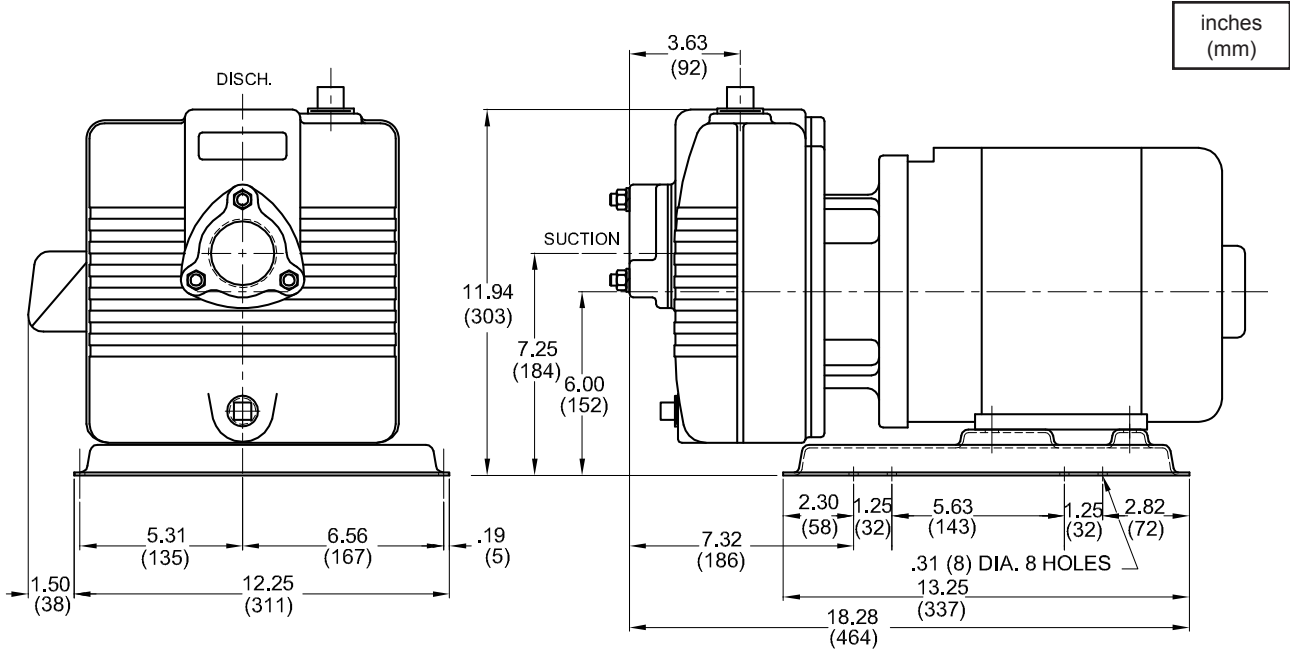

MODEL NO.	HP	VOLTS	PH	RPM (NOM)	ODP MOTOR DESIGN			TEFC MOTOR DESIGN	
					FULL LOAD AMPS	LOCKED ROTOR AMPS	WEIGHT NET LBS	FULL LOAD AMPS	LOCKED ROTOR AMPS
10CCE	5.0	200-230/460	3	3450	15.2/7.6	92/46	164	6 @ 460	47 @ 460
10CCE-1	5.0	230	1	3450	23	125	164	23	170

**IMPORTANT!**

- 1.) DO NOT USE FOR PUMPING FLUIDS WITH A FLASH POINT OF LESS THAN 100°F.
- 2.) MAKE CERTAIN THAT PUMP AND/OR MOTOR ASSEMBLY AND CONTROLS HAVE THE APPROPRIATE RATINGS FOR THE GIVEN APPLICATION AREA CLASSIFICATION (ie DIVISION I, AGENCY LISTING ETC.)

**SECTION: A - PUMP SPECIFICATIONS: 15CCE**

**DISCHARGE** ..... 3" (76mm) x 3" (76mm) NPT ,  
Female

**LIQUID TEMPERATURE** 160°F (71°C) Continuous

**INTERMEDIATE** ..... Cast Iron ASTM A-48, Class 30

**VOLUTE** ..... Cast Iron ASTM A-48, Class 30

**BODY** ..... Cast Iron ASTM A-48, Class 30

**PEDESTAL** ..... Cast Iron ASTM A-48, Class 30

**IMPELLER** *Design* ..... Semi-Open  
*Material* ..... Cast Iron ASTM A-48, Class 30  
Dynamically Balanced, ISO G6.3

**SHAFT** ..... Stainless Steel

**SQUARE RINGS** ..... Buna-N

**HARDWARE** ..... 300 Series Stainless Steel

**PAINT** ..... Air dry enamel

**SEAL** *Design* ..... Mechanical  
*Lubrication* .... Self-Lubrication  
*Material* ..... Rotating Faces - Carbon  
Stationary Faces - Ni-Resist  
Elastomer - Buna-N  
Hardware - 300 series stainless steel


**SHAFT SLEEVE** ..... Bronze

**CHECK VALVE:**  
*Material* ..... Valve Flap - Neoprene  
Weight - Cast Iron ASTM A-48, Class 30

**MOTOR:** *Design* ..... ODP, NEMA B, three phase,  
Torque Curve, C-Face, Footed,  
Squirrel Cage Induction  
Marine Duty per USCG259 and  
AIEEE-45, 50°C Ambient  
*Insulation* ..... Class B

**THREE PHASE** ..... 200-240/480 is Tri voltage motor.

**OPTIONAL EQUIPMENT:** Seal Material, TEFC motors

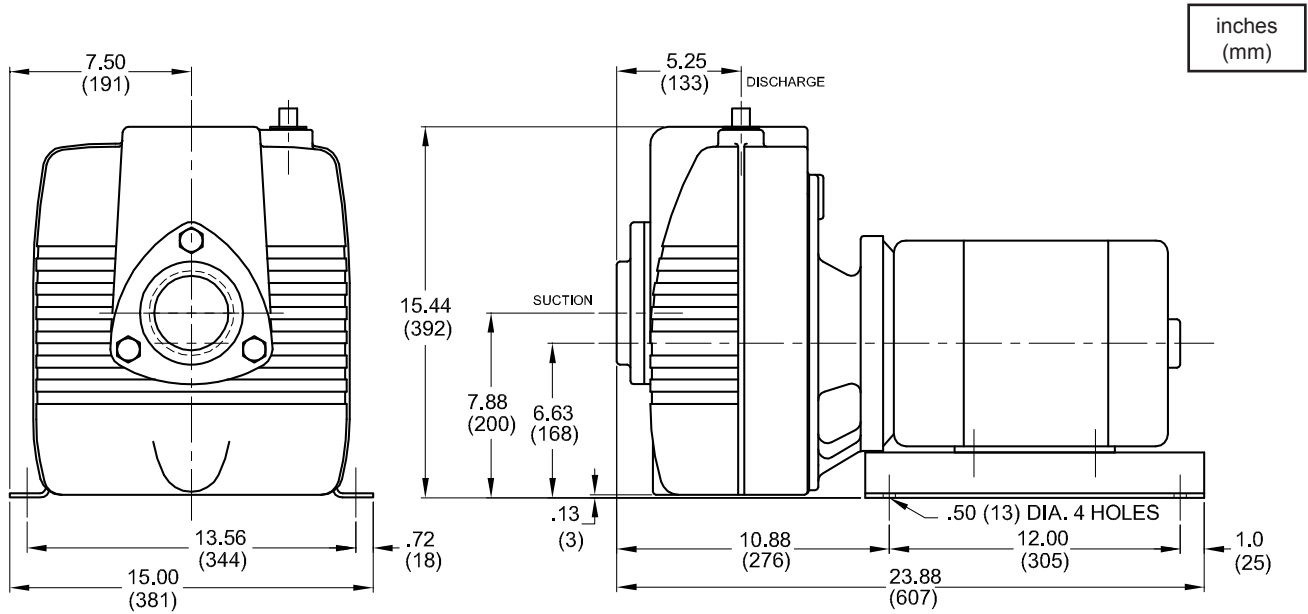

MODEL NO.	HP	VOLTS	PH	RPM (NOM)	ODP MOTOR DESIGN			TEFC MOTOR DESIGN	
					FULL LOAD AMPS	LOCKED ROTOR AMPS	WEIGHT NET LBS	FULL LOAD AMPS	LOCKED ROTOR AMPS
15CCE	7.5	200-230/460	3	3450	22/11	127/63.5	248	20-19.2/9.6	


**IMPORTANT!**

- 1.) DO NOT USE FOR PUMPING FLUIDS WITH A FLASH POINT OF LESS THAN 100°F.
- 2.) MAKE CERTAIN THAT PUMP AND/OR MOTOR ASSEMBLY AND CONTROLS HAVE THE APPROPRIATE RATINGS FOR THE GIVEN APPLICATION AREA CLASSIFICATION (ie DIVISION I, AGENCY LISTING ETC.)

**SECTION: A - PUMP SPECIFICATIONS: 20CCE**

**DISCHARGE** ..... 3" (76mm) x 3" (76mm) NPT , Female  
**LIQUID TEMPERATURE** 160°F (71°C) Continuous  
**INTERMEDIATE** ..... Cast Iron ASTM A-48, Class 30  
**VOLUTE** ..... Cast Iron ASTM A-48, Class 30  
**BODY** ..... Cast Iron ASTM A-48, Class 30  
**PEDESTAL** ..... Cast Iron ASTM A-48, Class 30  
**IMPELLER Design** ..... Semi-Open  
*Material* ..... Cast Iron ASTM A-48, Class 30  
 Dynamically Balanced, ISO G6.3  
**SHAFT** ..... Stainless Steel  
**SQUARE RINGS** ..... Buna-N  
**HARDWARE** ..... 300 Series Stainless Steel  
**PAINT** ..... Air dry enamel  
**SEAL** *Design* ..... Mechanical  
*Lubrication* .... Self-Lubrication  
*Material* ..... Rotating Faces - Carbon  
 Stationary Faces - Ni-Resist  
 Elastomer - Buna-N  
 Hardware - 300 series stainless steel

**SHAFT SLEEVE** ..... Bronze  
**CHECK VALVE:**  
*Material* ..... Valve Flap - Neoprene  
 Weight - Cast Iron ASTM A-48, Class 30  
**MOTOR:** *Design* ..... ODP, NEMA B, Three phase,  
 Torque Curve, C-Face, Footed,  
 Squirrel Cage Induction, Marine  
 Duty per USCG259 and AIEEE-45,  
 50°C Ambient  
*Insulation* ..... Class B  
**THREE PHASE** ..... 200-240/480 is Tri voltage motor.  
**OPTIONAL EQUIPMENT:** Seal Material, TEFC motors

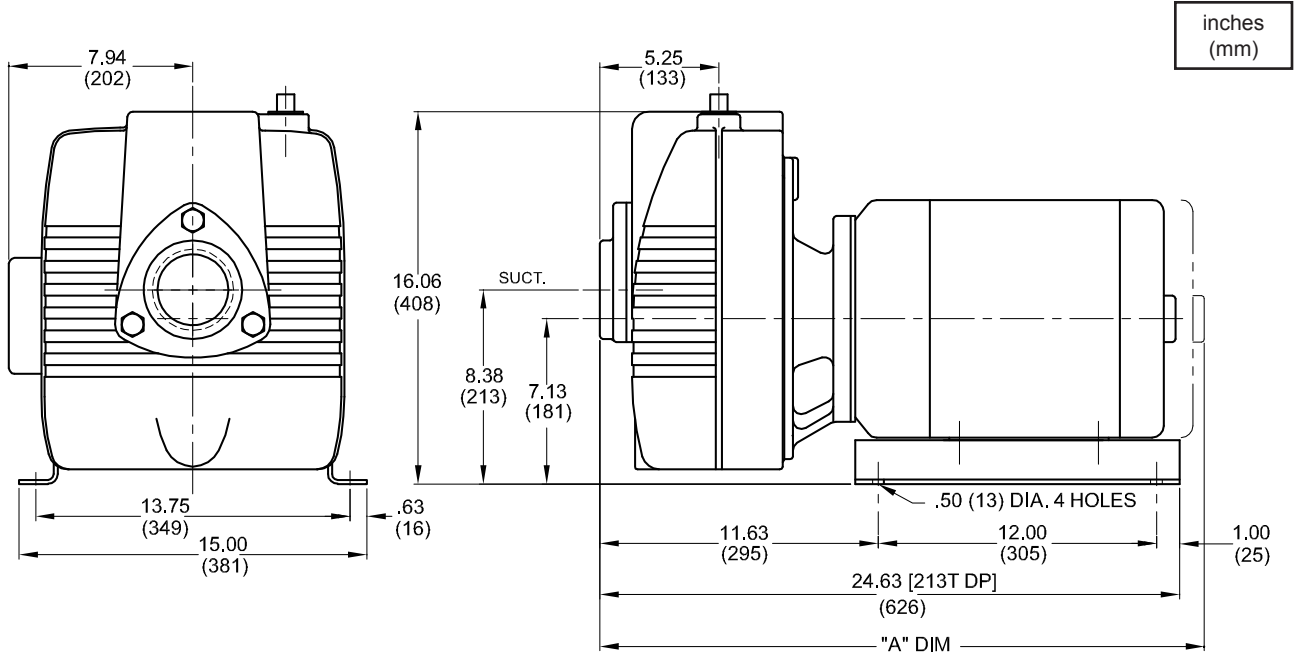

MODEL NO.	HP	ODP MOTOR DESIGN						TEFC MOTOR DESIGN	
		VOLTS	PH	RPM (NOM)	FULL LOAD AMPS	LOCKED ROTOR AMPS	WEIGHT NET LBS	FULL LOAD AMPS	LOCKED ROTOR AMPS
20CCE	10	200-230/460	3	3450	28/14	162/81	294	12 @ 460	115 @ 460
OPTIONAL MOTOR FRAMES	"A" DIMENSION								
	215T - OPD		213T - TEFC		215T - TEFC				
	25.69 (653)		26.88 (683)		27.63 (702)				

**IMPORTANT!**

- 1.) DO NOT USE FOR PUMPING FLUIDS WITH A FLASH POINT OF LESS THAN 100°F.
- 2.) MAKE CERTAIN THAT PUMP AND/OR MOTOR ASSEMBLY AND CONTROLS HAVE THE APPROPRIATE RATINGS FOR THE GIVEN APPLICATION AREA CLASSIFICATION (ie DIVISION I, AGENCY LISTING ETC.)

**SECTION: A - PUMP SPECIFICATIONS: 25CCE**

**DISCHARGE** ..... 3" (76mm) x 3" (76mm) NPT ,  
Female

**LIQUID TEMPERATURE** 160°F (71°C) Continuous

**INTERMEDIATE** ..... Cast Iron ASTM A-48, Class 30

**VOLUTE** ..... Cast Iron ASTM A-48, Class 30

**BODY** ..... Cast Iron ASTM A-48, Class 30

**PEDESTAL** ..... Cast Iron ASTM A-48, Class 30

**IMPELLER** *Design* ..... Semi-Open  
*Material* ..... Cast Iron ASTM A-48, Class 30  
Dynamically Balanced, ISO G6.3

**SHAFT** ..... Stainless Steel

**SQUARE RINGS** ..... Buna-N

**HARDWARE** ..... 300 Series Stainless Steel

**PAINT** ..... Air dry enamel

**SEAL** *Design* ..... Mechanical  
*Lubrication* .... Self-Lubrication  
*Material* ..... Rotating Faces - Carbon  
Stationary Faces - Ni-Resist  
Elastomer - Buna-N  
Hardware - 300 series stainless steel


**SHAFT SLEEVE** ..... Bronze

**CHECK VALVE:**  
*Material* ..... Valve Flap - Neoprene  
Weight - Cast Iron ASTM A-48, Class 30

**MOTOR:** *Design* ..... ODP, NEMA B, three phase,  
Torque Curve, C-Face, Footed,  
Squirrel Cage Induction  
Marine Duty per USCG259 and  
AIEEE-45, 50°C Ambient  
*Insulation* ..... Class B

**THREE PHASE** ..... 200-240/480 is Tri voltage motor.

**OPTIONAL EQUIPMENT:** Seal Material, TEFC motors

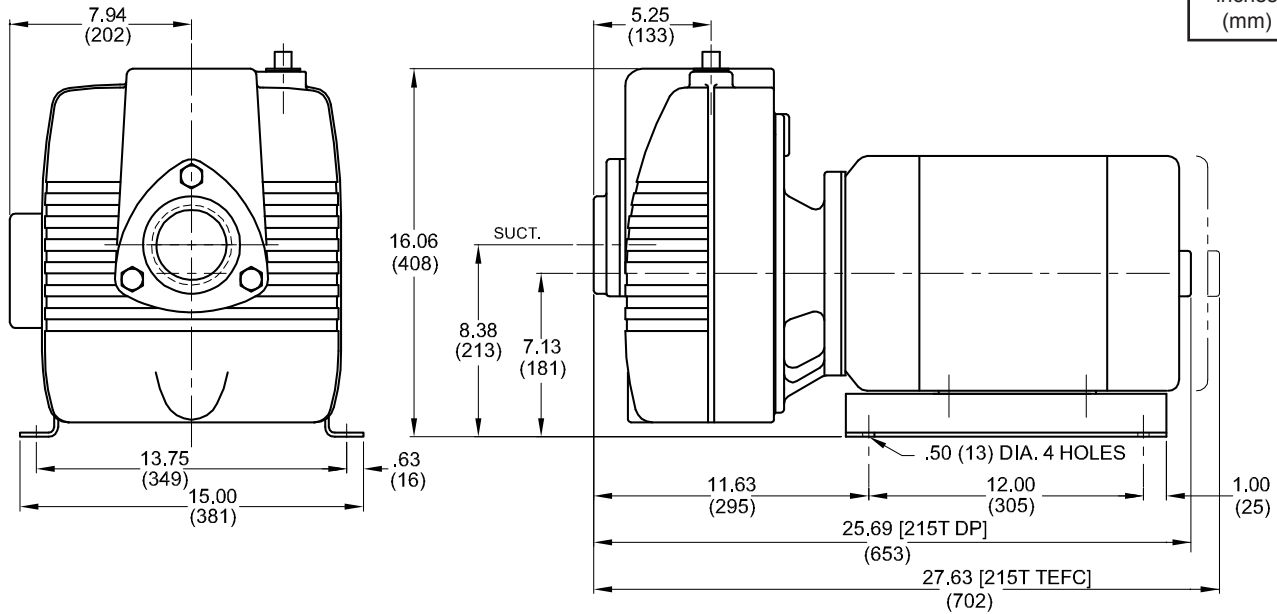

inches  
(mm)

MODEL NO.	HP	VOLTS	PH	RPM (NOM)	ODP MOTOR DESIGN			TEFC MOTOR DESIGN	
					FULL LOAD AMPS	LOCKED ROTOR AMPS	WEIGHT NET LBS	FULL LOAD AMPS	LOCKED ROTOR AMPS
25CCE	15	200-230/460	3	3450	42/21	232/116	322	18.5 @ 460	125 @ 460

**IMPORTANT!**

- 1.) **DO NOT** USE FOR PUMPING FLUIDS WITH A FLASH POINT OF LESS THAN 100°F.
- 2.) MAKE CERTAIN THAT PUMP AND/OR MOTOR ASSEMBLY AND CONTROLS HAVE THE APPROPRIATE RATINGS FOR THE GIVEN APPLICATION AREA CLASSIFICATION (ie DIVISION I, AGENCY LISTING ETC.)



## SECTION B: GENERAL INFORMATION

### B-1) To the Purchaser:

Congratulations! You are the owner of one of the finest pumps on the market today. Barnes products are engineered and manufactured of high quality components. Over one hundred years of pump building experience along with a continuing quality assurance program combine to produce a pump which will stand up to the toughest applications. This manual will provide helpful information concerning installation, maintenance, and proper service guidelines.

### B-2) Receiving:

Upon receiving the pump, it should be inspected for damage or shortages. If damage has occurred, file a claim immediately with the company that delivered the pump. If the manual is removed from the packaging, do not lose or misplace.

### B-3) Storage:

*Short Term-* Barnes pump's are manufactured for efficient performance following short inoperative periods in storage. For best results, pumps can be retained in storage, as factory assembled, in a dry atmosphere with constant temperatures for up to six (6) months.

*Long Term-* Any length of time exceeding six (6) months, but not more than twenty four (24) months. The units should be stored in a temperature controlled area, a roofed over walled enclosure that provides protection from the elements (rain, snow, wind blown dust, etc.), and whose temperature can be maintained between +40 deg. F and +120 deg. F. If extended high humidity is expected to be a problem, all exposed parts should be inspected before storage and all surfaces that have the paint scratched, damaged, or worn should be recoated with a water base, air dry enamel paint. All surfaces should then be sprayed with a rust-inhibiting oil.

Pump should be stored in its original shipping container and on initial start up, rotate impeller by hand to assure seal and impeller rotate freely.

### B-4) SERVICE CENTERS:

For the location of the nearest Barnes Service Center, check your Barnes representative or Barnes Service Department in Piqua, Ohio, telephone (937) 778-8947 or Crane Pumps & Systems Canada, Bramton, Ontario (905) 457-6223.

## SECTION C: INSTALLATION:

### C-1) Location:

The pump should be located as near as possible to the liquid to be pumped and in no case should the pump be more than 25 feet above the surface of the liquid supply. The pump should always be as level as possible.

### C-2) Rotation:

Check rotation of pump to be sure that it agrees with direction indicated on the "ROTATION PLATE". If rotation is incorrect, change as follows; 3 phase, interchange any two incoming wire leads. 1 phase, follow connection name plate on motor. All pump units rotate clockwise when looking from the driven end of the pump. Locate the pump on a firm footing to make sure the pump will not move due to vibration. The pumps should be level to provide favorable operating conditions.

### C-3) Suction System:

It is advisable to use a suction line of the same size as the pump port size. All horizontal suction lines should slope up to the pump to avoid trapped air pockets. An adjustable stand, pipe clamp or floor flange must be installed to support the weight of the suction line. Using a smaller suction line than the pump port size can cause internal damage to the pump. The suction line must not have holes, even small holes. The smallest air leak in the suction line may prevent the pump from priming. Coat all threaded connections in the suction line with pipe thread compound to insure an air tight joint. In addition, suction flanges should be pulled up tight to prevent air leaks.



**CAUTION!** - This pump should not be operated without a strainer on the end of the suction line to prevent sticks, stones, rags and other foreign matter from being drawn into the impeller. The strainer should be cleaned regularly to insure full flow.

### C-4) Discharge System:

Connect discharge hose or pipe to the side outlet on the discharge tee or to the discharge elbow.

### C-5) Electric Motor & Connections:

Read Motor Manufacture's Instructions or connection diagram located on the motor name plate or inside the cover on conduit box. Wiring of motor and control, overload protection and grounding should be in accordance with State, Province, Local and National Electrical Code (NEC) or Canadian Electrical Code (CEC). Be sure the following guidelines are met:

1. AC power is within  $\pm 10\%$  of rated voltage with rated frequency. (See motor name plate for rating).

OR

2. AC power is within  $\pm 5\%$  of rated frequency with rated voltage.

OR

3. A combined variation in voltage and frequency of  $\pm 10\%$  (sum of absolute values) of rated values, provided the frequency variation does not exceed  $\pm 5\%$  of rated frequency.

### C-6) Pump Lubrication:

The pump requires no lubrication. The impeller and seal are the only moving parts of the pump and these parts are water lubricated and need no attention.



**CAUTION!** - DO NOT operate pump without liquid in pump body as operating dry will result in damage to the seal.

## SECTION D: OPERATION:

### D-1) Priming:

Remove the priming plug in the top of the discharge tee or in top of pump body, and fill the pump body completely with liquid as free of solids as possible. In freezing weather, the pump should be primed with warm water, if possible, to prevent any damage that may be caused by ice films within the pump.

### D-2) Starting:

After completion of procedures outlined in Section C and D-1, the pump is then ready for operation. Start pump by applying power to motor as outlined in the Motor Instructions.

### D-3) Shutdown:

Operation may be discontinued by disconnecting electric power. When the pump has been operating in freezing weather or in liquid containing a considerable amount of solids, it is advisable to drain the pump body by removing drain plug (26) and flushing the solids out of the body. Replace the drain plug.

### D-4) Restart:

At each subsequent start, particularly if the pump has been drained, the priming liquid level should be checked since the pump is self-priming only when the body is full of liquid.

## SECTION E: PUMP SERVICE AND REPAIR:

### E-1) Check Valve Service:

To clean out or repair check valve, disconnect suction piping. Remove cap screws (24) and suction flange (23). **DO NOT PRY ON FLANGE** but rather bump off with a block of wood and a hammer. Pull off gasket (22C) together with weights (22A) and (22B), round head screw (22E) and lockwasher (22D). Examine and replace any parts showing wear or damage.

When replacing gasket and weight assembly onto pump body make sure that HINGE section of gasket (22C) is at TOP and that LARGE weight is on PUMP SIDE of gasket.

### E-2) Body, Volute and Impeller Service:

To clean out or repair the body (18), volute (15) or impeller (12), disconnect suction and discharge piping. Remove hex nuts (21) and lockwashers (20) and pull body (18) from intermediate coupling (2). This will expose O-ring (4), impeller (12), impeller locking screw (13), volute (15) and volute gasket (17). Examine and replace any part showing undue wear or damage.

When impeller (12) needs replaced, pull volute (15) from intermediate coupling (2), remove set screw (13 on 3CCE - 5CCE) or cap screws (13) and washers (14) on 10CCE - 25CCEs, and unscrew the impeller from the motor shaft. The impeller is screwed onto the shaft with right hand thread and to break loose use a block of wood against a vane and strike with a hammer. At reassembly, be sure to use the required number of shims (10) and (11) to result in an impeller-to-volute clearance of not more than .015".

### E-3) Shaft Seal Service:

To examine or replace shaft seal, remove body (18) and impeller (12) as outlined in Paragraph E-2. Remove impeller shims (10) and (11). Remove rotating member of shaft seal (9) from motor shaft. All of the components of the shaft seal are now exposed for examination. If any part shows wear or damage, replace entire shaft seal assembly. When stationary member needs replacing, pry used stationary member from intermediate coupling (2).



**CAUTION! - handle seal parts with extreme care. DO NOT scratch or mar lapped faces.**

Lightly oil ring and press stationary member over motor shaft and into intermediate coupling (2). Lightly oil motor shaft and inner surface of bellows of rotating member. With lapped surface facing intermediate coupling, slide rotating member onto shaft until lapped faces of rotating member and stationary member are together. Reassemble remainder of pump.

### E-4) Motor Service:

To remove or replace motor (1), disassemble pump as outlined in Paragraphs E-2 and E-3.

Remove cap screws (5), lockwashers (6) to remove motor (1), and base (7) (On 3CCE - 5CCE's). To remove motor (1) from base (7) on 10CCE - 25CCE's, remove cap screws (28) on hex nuts (27).

## SECTION: F REPLACEMENT PARTS

### F-1 ORDERING REPLACEMENT PARTS:

When ordering replacement parts, ALWAYS furnish the following information:

1. Pump serial number and date code. (F-4)
2. Pump model number. (F-3)
3. Pump part number. (F-2)
4. Part description.
5. Item part number.
6. Quantity required.
7. Shipping instructions.
8. Billing instructions.

### F-2 PART NUMBER:

The part number consists of a six (6) digit number, which appears in the catalog. A one or two letter suffix may follow this number to designate the design configuration. This number is used for ordering and obtaining information.

### F-3 MODEL NUMBER:

This designation consists of numbers and letters which represent the discharge size, series horsepower, motor phase and voltage, speed and pump design. This number is used for ordering and obtaining information.

### F-4 SERIAL NUMBER:

The serial number block will consist of a six digit number, which is specific to each pump and may be preceded by a alpha character, which indicates the plant location. This number will also be suffixed with a four digit number, which indicates the date the unit was built (Date Code). EXAMPLE: A012345 0490.


Reference the six digit portion (Serial Number) of this number when referring to the product.

## TROUBLE SHOOTING


CAUTION ! Always disconnect the pump from the electrical power source before handling.  
If the system fails to operate properly, carefully read instructions and perform maintenance recommendations.

SYMPTOM	POSSIBLE CAUSE(S)	
Little or no discharge and unit will not prime	<ol style="list-style-type: none"> <li>1. Casing not filled with water</li> <li>2. Total head too high</li> <li>3. Suction head higher than pump designed for</li> <li>4. Impeller partially or completely plugged</li> <li>5. Hole or leak in suction line</li> <li>6. Foot-valve too small</li> <li>7. Impeller damaged</li> <li>8. Foot-valve or suction line not submerged deep enough in water; pulling air</li> <li>9. Insufficient inlet pressure or suction head</li> <li>10. Suction piping too small</li> <li>11. Casing gasket leaking</li> <li>12. Suction or discharge line valves closed</li> <li>13. Piping is fouled or damaged</li> <li>14. Clogged strainer or foot-valve</li> </ol>	<ol style="list-style-type: none"> <li>1. Fill pump casing. Using a foot-valve will extend pump life and facilitate immediate priming</li> <li>2. Shorten suction head</li> <li>3. Lower suction head, install foot-valve and prime.</li> <li>4. Disassemble pump and clean out impeller</li> <li>5. Repair or replace suction line</li> <li>6. Match foot-valve to piping or install one size larger foot-valve</li> <li>7. Disassemble pump and replace impeller</li> <li>8. Submerge lower in water</li> <li>9. Increase inlet pressure by adding more water to tank or increasing back pressure by turning gate valve on discharge line partially closed position</li> <li>10. Increase pipe size to pump inlet size or larger</li> <li>11. Replace</li> <li>12. Open</li> <li>13. Clean or replace</li> <li>14. Clean or replace</li> </ol>
Loss of suction after satisfactory operation	<ol style="list-style-type: none"> <li>1. Air leak in suction line</li> <li>2. When unit was last turned off, water siphoned out of pump casing</li> <li>3. Suction head higher than pump designed for</li> <li>4. Insufficient inlet pressure or suction head</li> <li>5. Clogged foot-valve, strainer, or pump</li> <li>6. Defective wearplate(s)</li> </ol>	<ol style="list-style-type: none"> <li>1. Repair or replace suction line</li> <li>2. Refill (reprime) pump casing before restarting</li> <li>3. Lower suction head, install foot-valve and primer</li> <li>4. Increase inlet pressure by adding more water to tank or increasing back pressure by turning gate valve on discharge line to partially closed position.</li> <li>5. Unclog, clear or replace as necessary.</li> <li>6. Replace.</li> </ol>
Pump overloads driver	<ol style="list-style-type: none"> <li>1. Total head lower than pump rating, unit delivering too much water</li> <li>2. Specific gravity and viscosity of liquid being pumped different than the pump rating</li> </ol>	<ol style="list-style-type: none"> <li>1. Increase back pressure on pump by turning gate valve on discharge line to partially closed position that will not overload motor.</li> <li>2. Consult factory.</li> </ol>
Pump vibrates and/or makes excessive noise	<ol style="list-style-type: none"> <li>1. Mounting plate or foundation not rigid enough</li> <li>2. Foreign material in pump causing unbalance</li> <li>3. Impeller bent</li> <li>4. Cavitation present</li> <li>5. Piping not supported to relieve any strain on pump assembly</li> </ol>	<ol style="list-style-type: none"> <li>1. Reinforce.</li> <li>2. Disassemble pump and remove.</li> <li>3. Replace impeller.</li> <li>4. Check suction line for proper size and check valve in suction line if completely open, remove any sharp bends before pump and shorten suction line.</li> <li>5. Make necessary adjustments.</li> </ol>
Pump runs but no fluid	<ol style="list-style-type: none"> <li>1. Faulty suction piping (air leak)</li> <li>2. Pump located too far from fluid source</li> <li>3. Gate valve closed</li> <li>4. Clogged strainer</li> <li>5. Fouled foot-valve</li> <li>6. Discharge height too great</li> <li>7. Fouled impeller</li> <li>8. Faulty mechanical seal</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace</li> <li>2. Replace</li> <li>3. Open</li> <li>4. Clean or replace</li> <li>5. Clean or replace</li> <li>6. Lower the height</li> <li>7. Clean or replace.</li> <li>8. Replace</li> </ol>
Pump leaks at shaft	<ol style="list-style-type: none"> <li>1. Worn mechanical seal</li> <li>2. Replacement seal not installed properly</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace</li> <li>2. Follow Maintenance instructions carefully</li> </ol>

**SERIES: 3CCE, 3CCE-1, 4CCE, 4CCE-1, 5CCE, 5CCE-1**

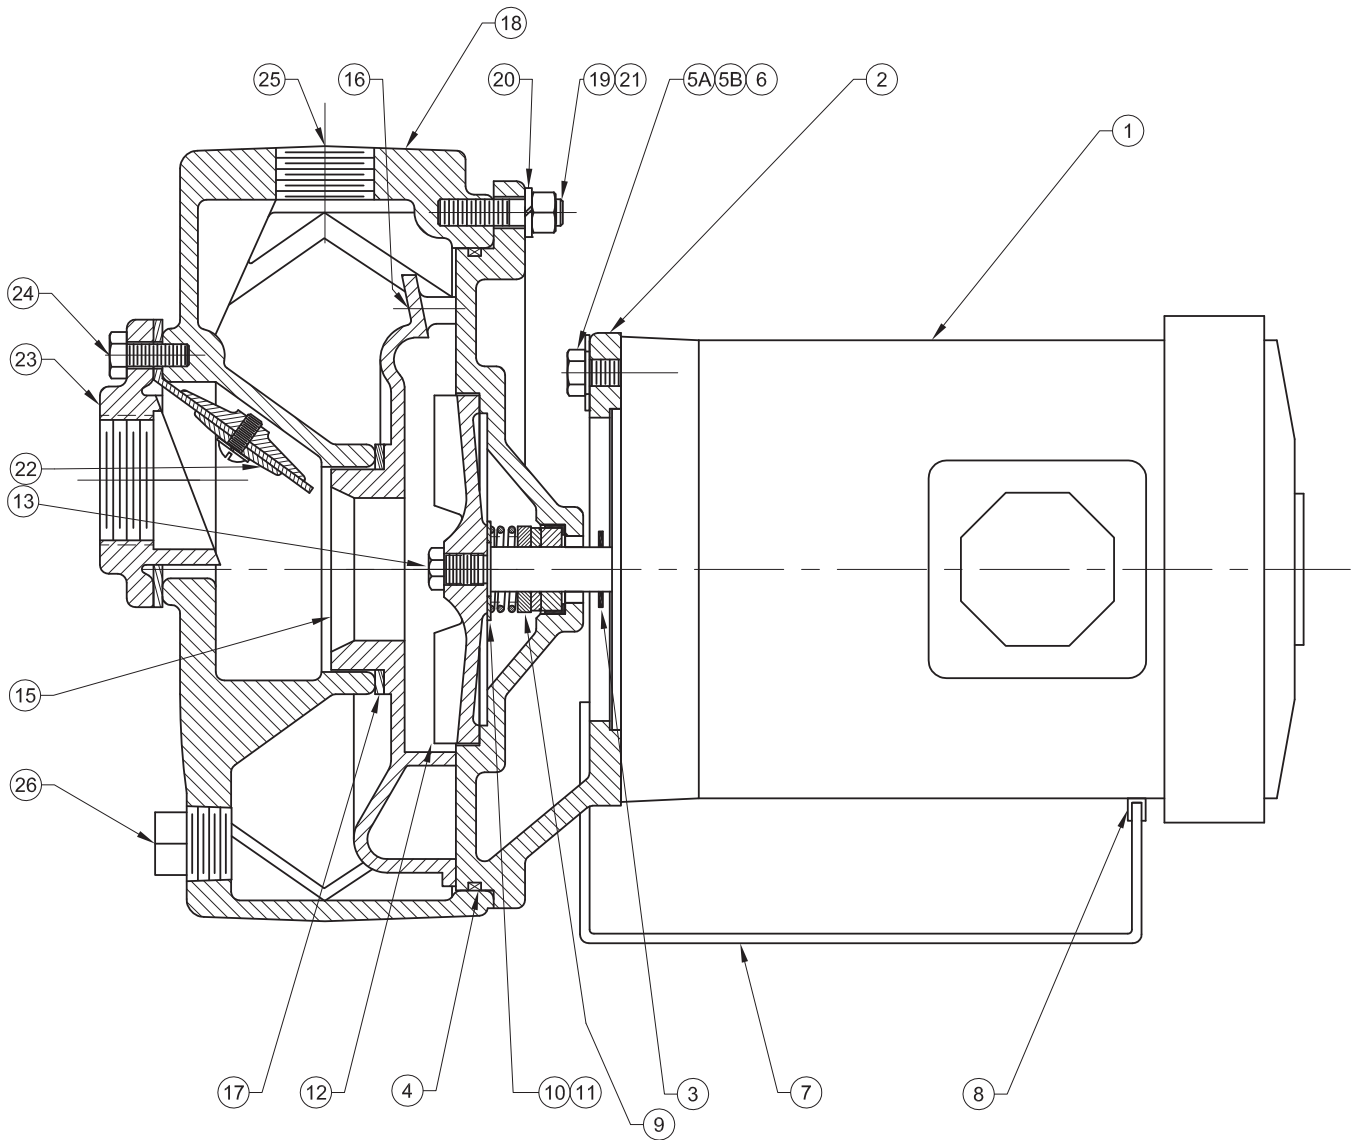

**SERIES: 3CCE, 3CCE-1, 4CCE, 4CCE-1, 5CCE, 5CCE-1**

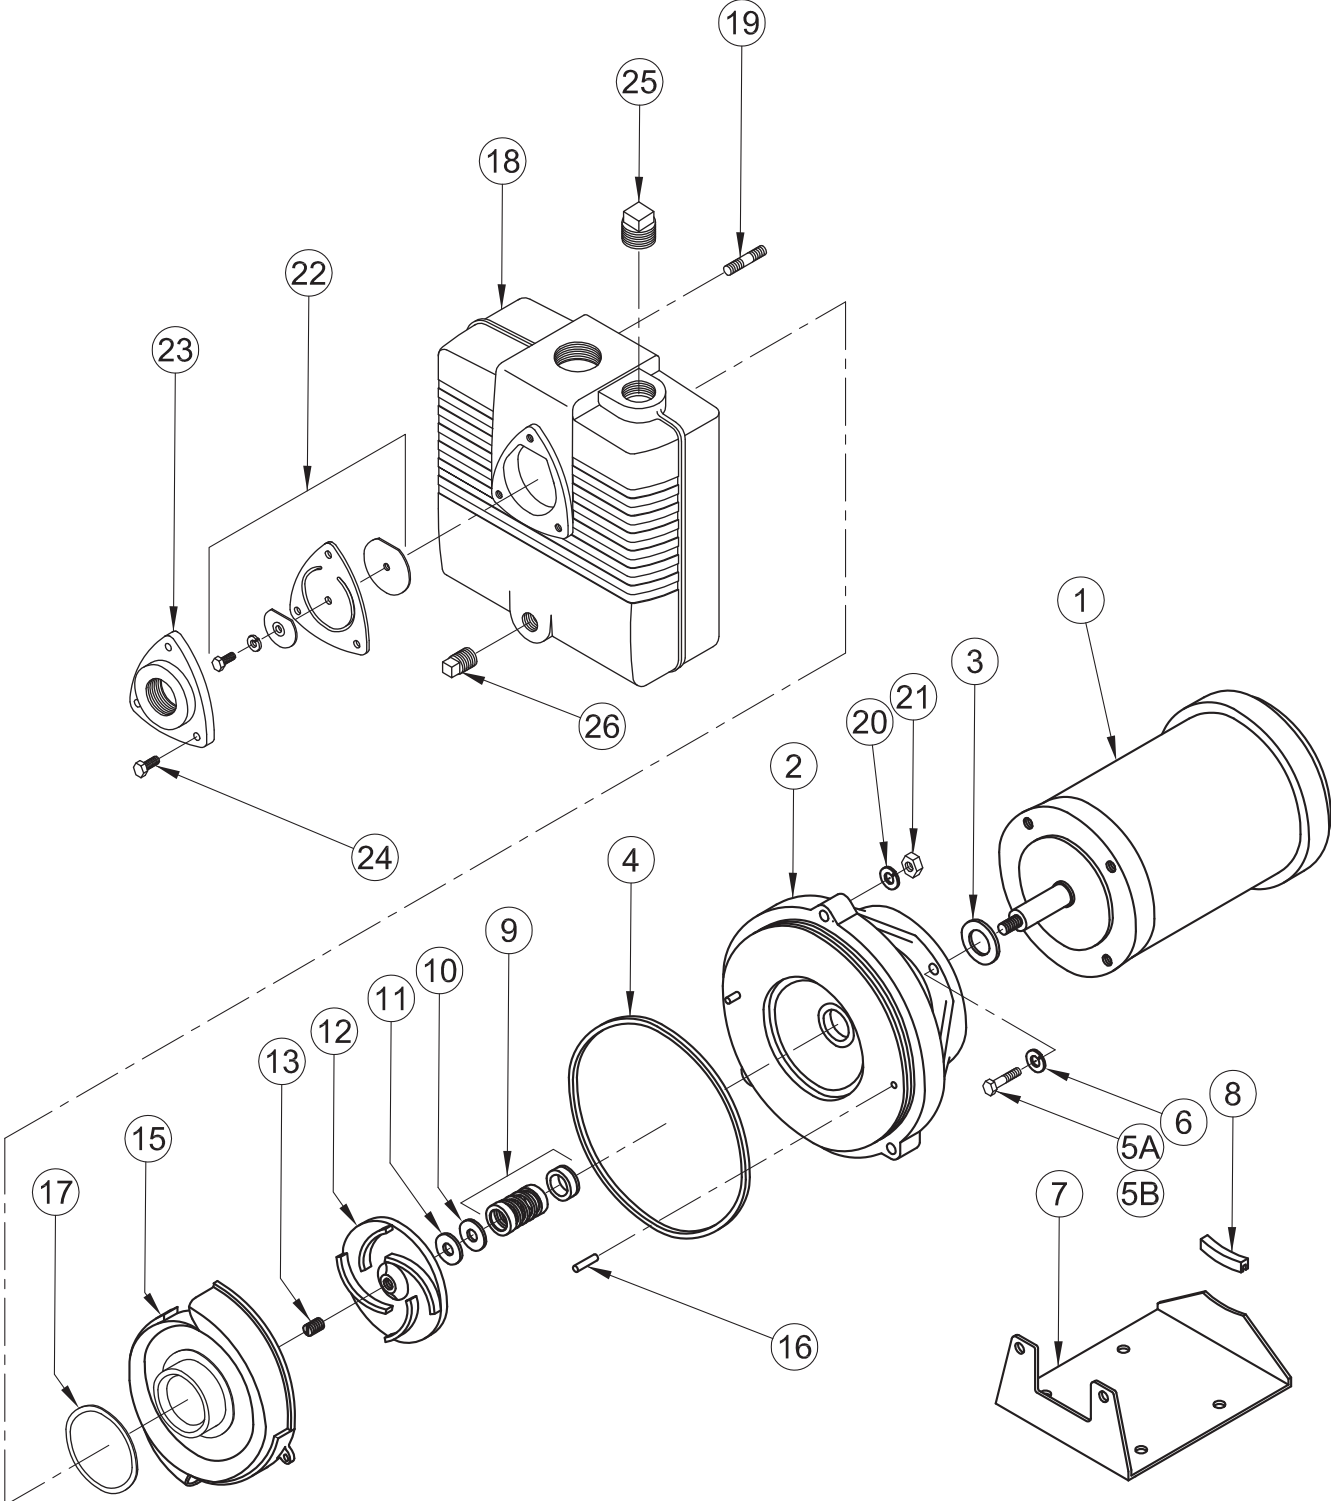

# SERIES: 3CCE, 3CCE-1, 4CCE, 4CCE-1, 5CCE, 5CCE-1

## PARTS KIT


**Seal Kit ..... P/N: 021814** (‡) 3,4,9,10,11,16,17,22C

**4CCE Parts Kit...P/N: 083862** (▲) 2, 3, 4, 5, 9, 10, 11, 12, 13, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26

## PARTS LIST


ITEM	QTY.	PART No.	DESCRIPTION		
1	1	015-230-371-02	Motor - 3CCE 230/460, ODP		
		012256	Motor - 3CCE-1 115/230, ODP		
		022433	Motor - 4CCE 200-230/460, ODP		
		022432	Motor - 4CCE-1 115/230, ODP		
		027455	Motor - 5CCE 200-230/460, ODP		
		027456	Motor - 5CCE-1 115/230, ODP		
		031203	Motor - 3CCE 200-230/460, TEFC		
		031473	Motor - 3CCE-1 115/230, TEFC		
		031474	Motor - 4CCE 200-230/460, TEFC		
		031475	Motor - 4CCE-1 115/230, TEFC		
		037646	Motor - 5CCE 200-230/460, TEFC		
		106434	Motor - 5CCE-1 115/230, TEFC		
		2	1	025469 ▲	Intermediate Coupling
		3	1	08105 ‡▲	Slinger
4	1	017713 ‡▲	O-Ring		
5A	2	Q15-57-E26	Cap Screw, 3CCE, 4CCE, 5CCE 3/8-16 x 1.125" Lg, Steel (Top Bolts)		
5B	2	002235	Cap Screw, 3CCE, 4CCE, 5CCE 3/8-16 x 1.25" Lg, Steel (Bottom Bolts)		
	4	002234 ▲	Cap Screw, 4CCE-1 3/8-16 x 1.00" Lg, Stainless		
6	4	028408	Lock Washer 3/8" Steel		
7	1	017432	Base		
8	1	017362	Pad		
9	1	012703 ‡▲	Shaft Seal, TP/CE/B		
10	A/R	026707 ‡▲	Shim, .010		
11	A/R	026706 ‡▲	Shim, .005		
12	1	026153	Impeller 3CCE		
		026213 ▲	4CCE		
		026154	5CCE		
13	1	026155	Set Screw, 3CCE 7/16-20		
	1	028153 ▲	Hex Nut, 4CCE, 5CCE 7/16-20, Stainless		
15	1	018095 ▲	Volute		
16	2	017715 ‡▲	Pin, Volute		
17	1	017714 ‡▲	Gasket, Volute		
18	1	018097 ▲	Body		
19	3	016569 ▲	Stud 3/8-16 x 1.75" Lg, Steel		
20	3	028408 ▲	Lock Washer 3/8", Steel		
21	3	15-23-6 ▲	Hex Nut 3/8-16, Zp		
22	1	017718 ▲	Check Valve Assy.		
22a	1	001338	Weight 2.25" O.D., CI		
22b	1	001339	Weight 1.56" O.D., CI		
22c	1	017712 ‡	Gasket Neoprene		
22d	1	20-13-1	Lock Washer 1/4", Stainless		
22e	1	023469	Round Hd Screw 1/4-20 x 625" Lg, Stainless		
23	1	018099 ▲	Suction Flange		
24	3	002218 ▲	Cap Screw 5/16-18 x .875" Lg, Steel		
25	1	003206 ▲	Pipe Plug 1.25 NPT		
26	1	003204 ▲	Pipe Plug .75 NPT		

# SERIES: 10CCE, 10CCE-1

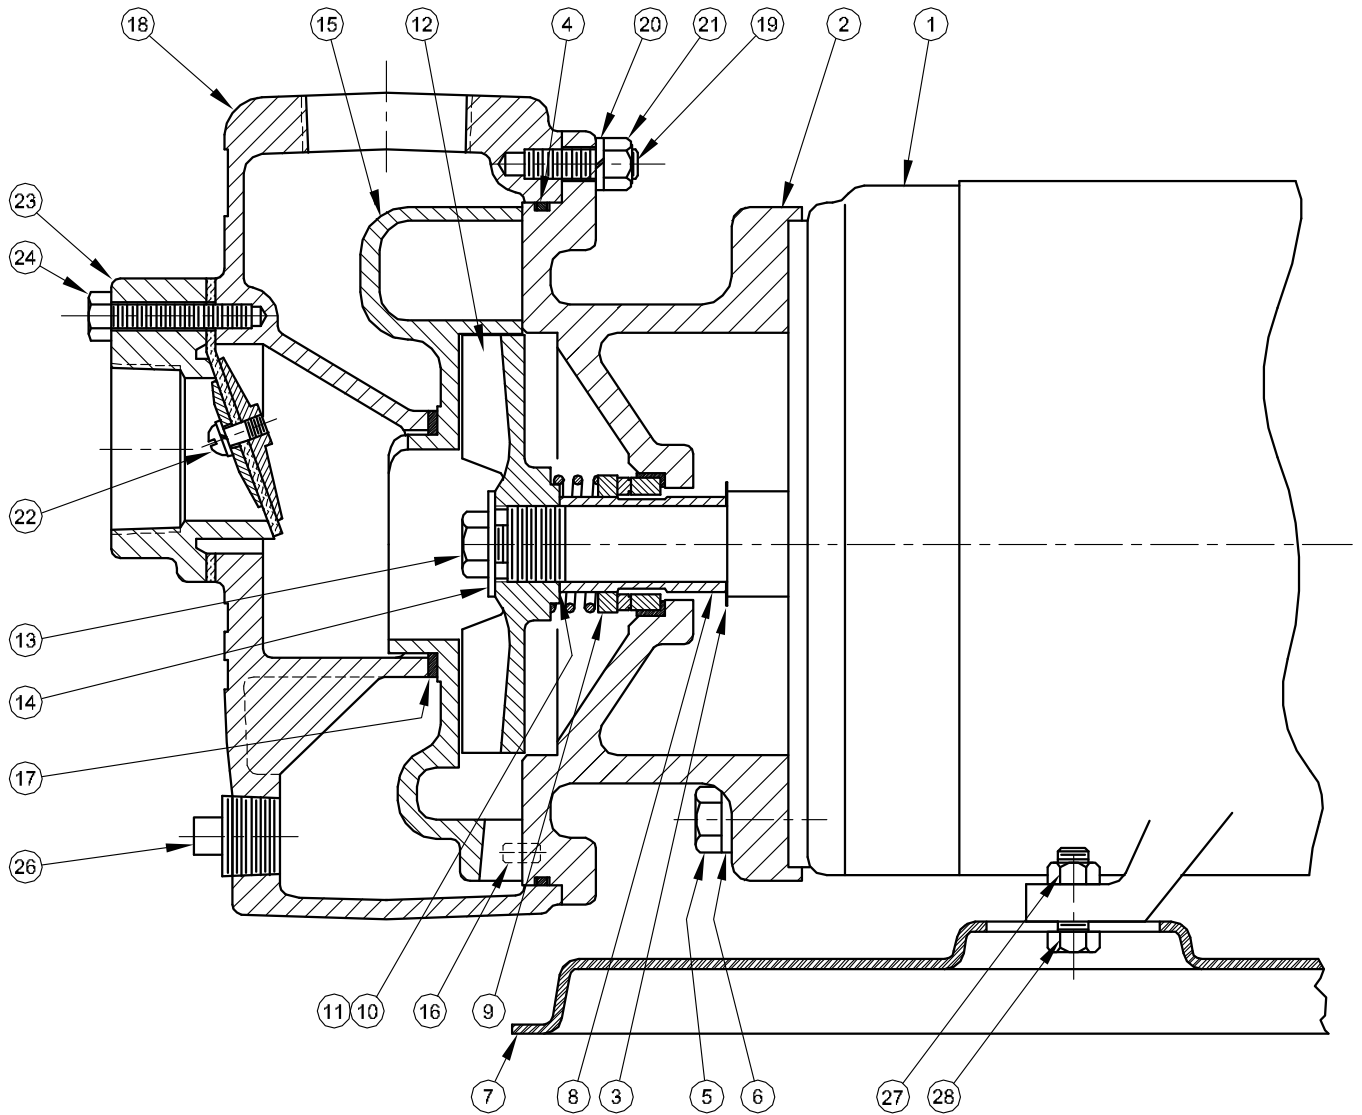



**SERIES: 10CCE, 10CCE-1**

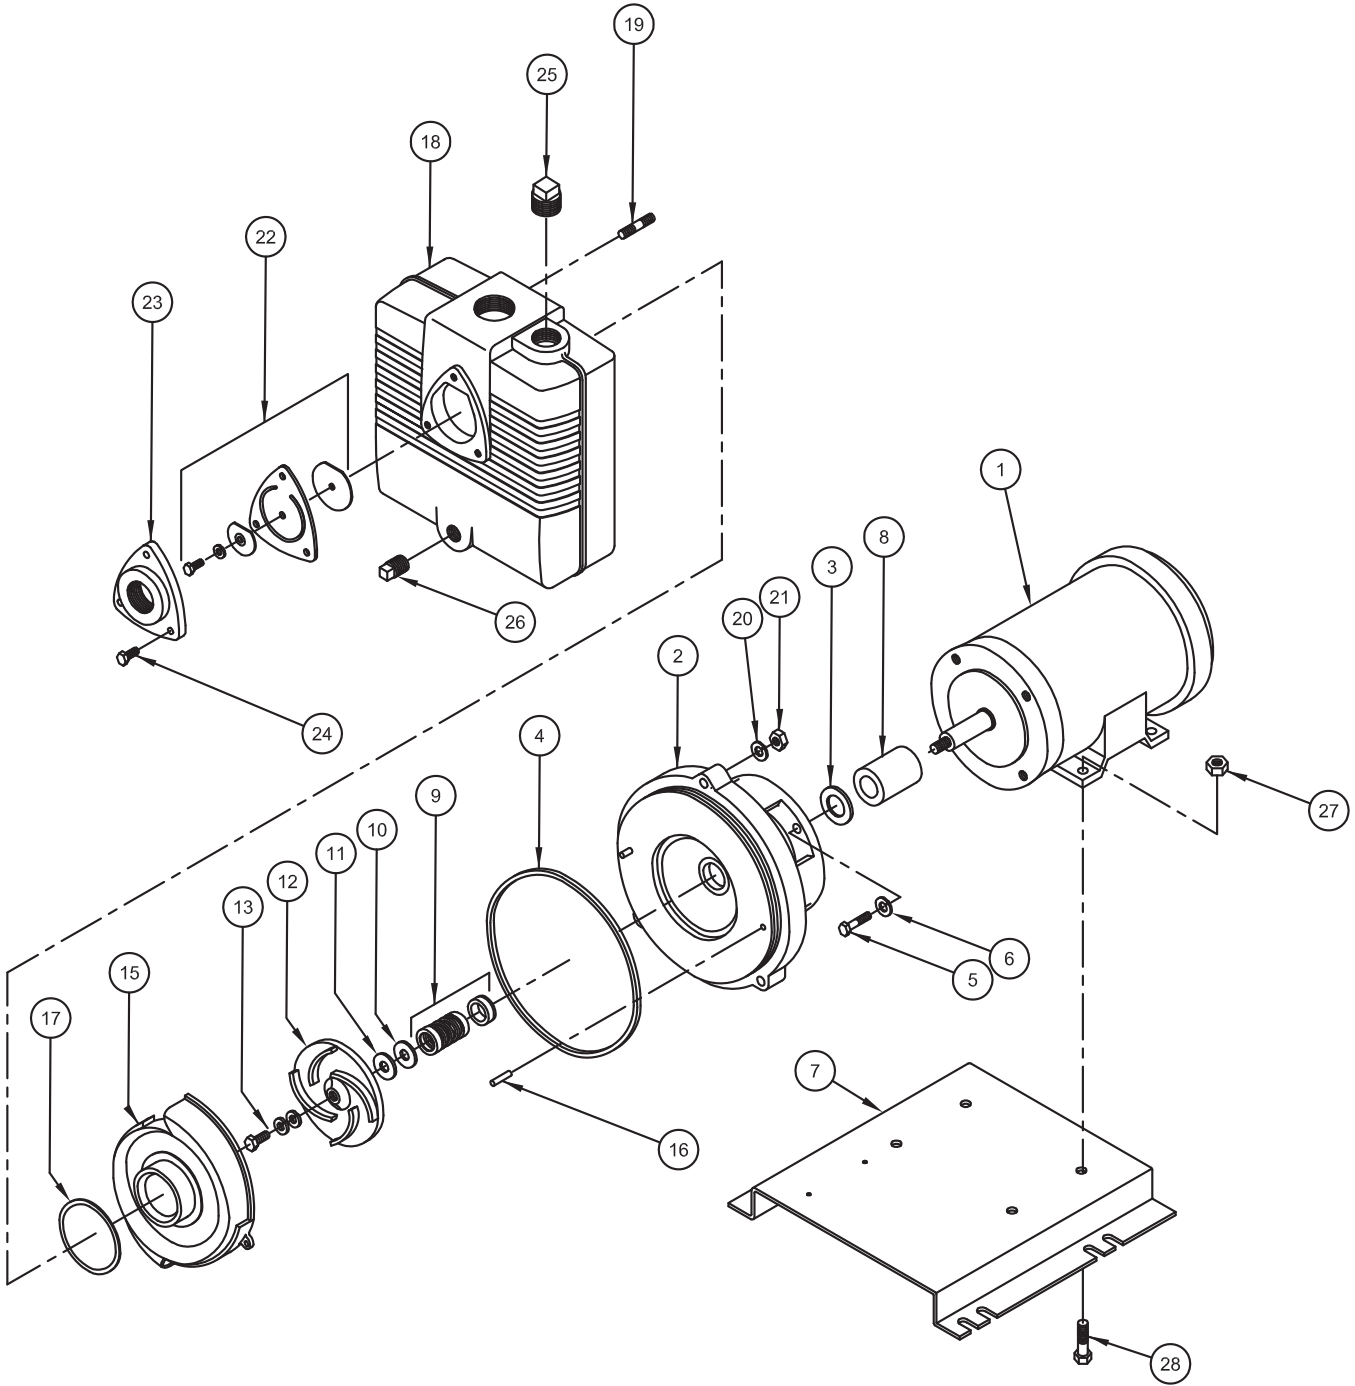



# SERIES: 10CCE, 10CCE-1


## PARTS KIT

**Seal Kit .....P/N: 072920** (‡) 3,4,8,9,10,11,16,17,22C


## PARTS LIST

ITEM	QTY.	PART No.	DESCRIPTION
1	1	028495	Motor - 10CCE 200-230/460, ODP
	1	028494	Motor - 10CCE-1 230, ODP
	1	036770	Motor - 10CCE 200-230/460, TEFC
	1	028494F	Motor - 10CCE-1 230, TEFC
2	1	019537	Intermediate Coupling
3	1	005163 ‡	Slinger
4	1	017713 ‡	O-Ring
5	4	002266	Cap Screw 1/2-13 x 1.50" Lg, Steel
6	4	002608	Lock Washer 1/2" Steel
7	1	137242	Base, 10CCE
		137242	Base, 10CCE-1
8	1	018071 ‡	Shaft Sleeve
9	1	019146 ‡	Shaft Seal C/NR/B
10	A/R	001349 ‡	Shim, .010
11	A/R	001348 ‡	Shim, .031
12	1	019775	Impeller
13	1	019802	Hex Hd Screw 1/2-20 x 1.00" Lg, Stainless
14	2	019803	Washer, Shakeproof 1/2, Stainless
15	1	019069	Volute
16	2	017715 ‡	Pin, Volute
17	1	019245 ‡	Gasket, Volute
18	1	019135	Body
19	3	016569	Stud 3/8-16 x 1.75" Lg, Steel
20	7	028408	Lock Washer 3/8", Steel
21	3	15-23-6	Hex Nut 3/8-16, Zp
22	1	017718	Check Valve Assy.
22a	1	001338	Weight 2.25" O.D., CI
22b	1	001339	Weight 1.56" O.D., CI
22c	1	017712 ‡	Gasket Neoprene
22d	1	20-13-1	Lock Washer 1/4", Stainless
22e	1	023469	Round Hd Screw 1/4-20 x 625" Lg, Stainless
23	1	018100	Suction Flange
24	3	002222	Cap Screw 5/16-18 x 1.75" Lg, Steel
25	1	003206	Pipe Plug 1.25 NPT
26	1	003204	Pipe Plug .75 NPT
27	4	15-23-6	Hex Nut 3/8-16 Zp
28	4	002234	Hex Hd Screw 3/8-16 x 1.00"Lg, Stainless

SERIES: 15CCE, 20CCE, 25CCE

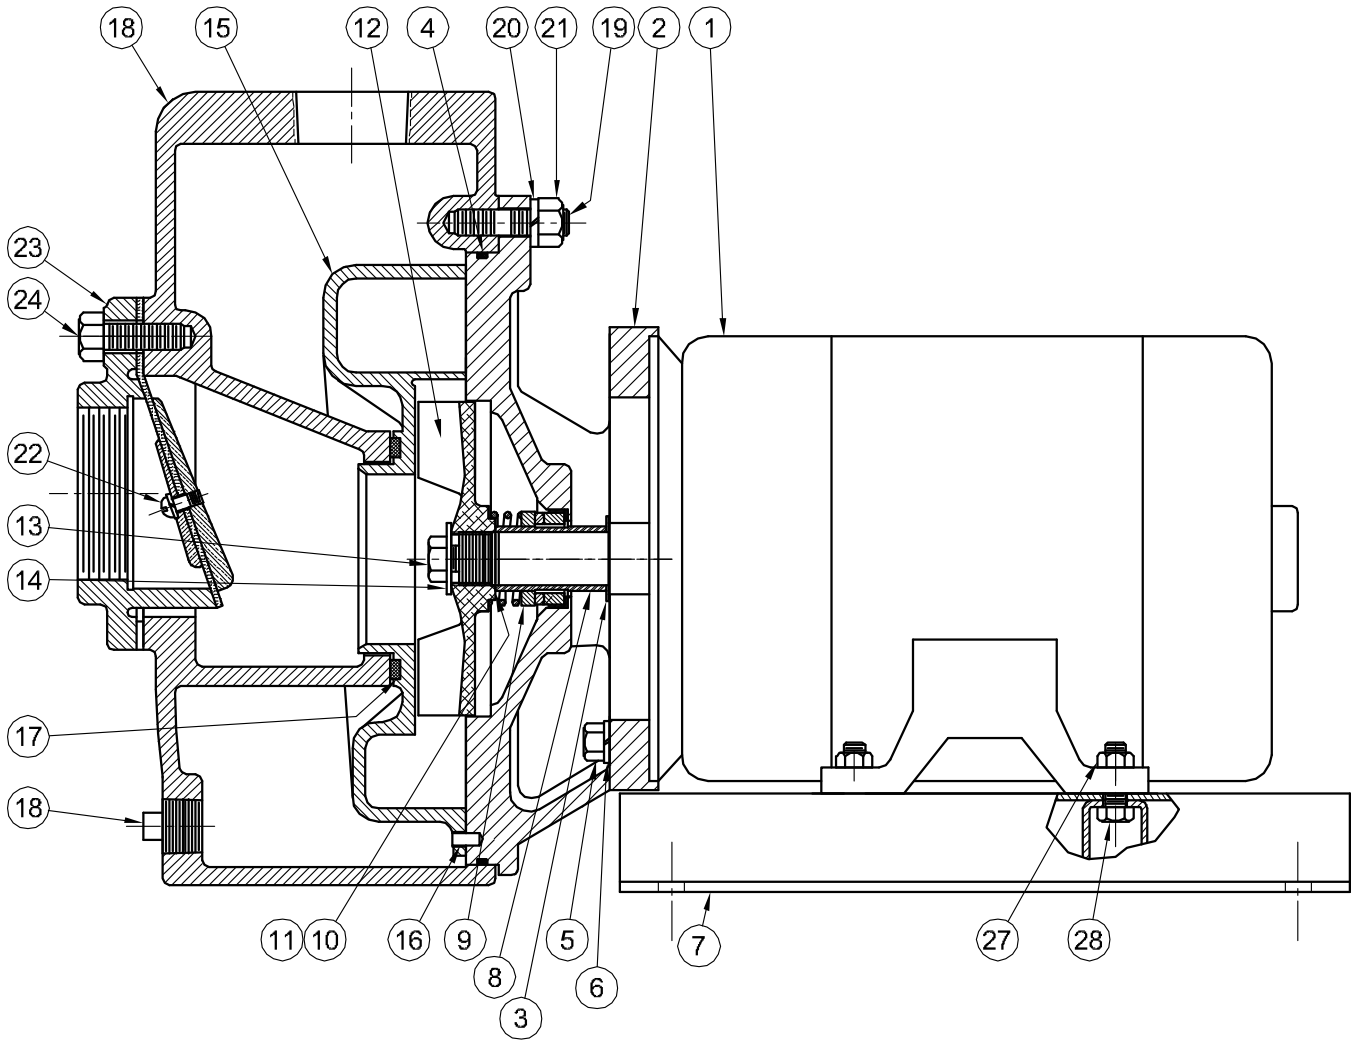

SERIES: 15CCE, 20CCE, 25CCE

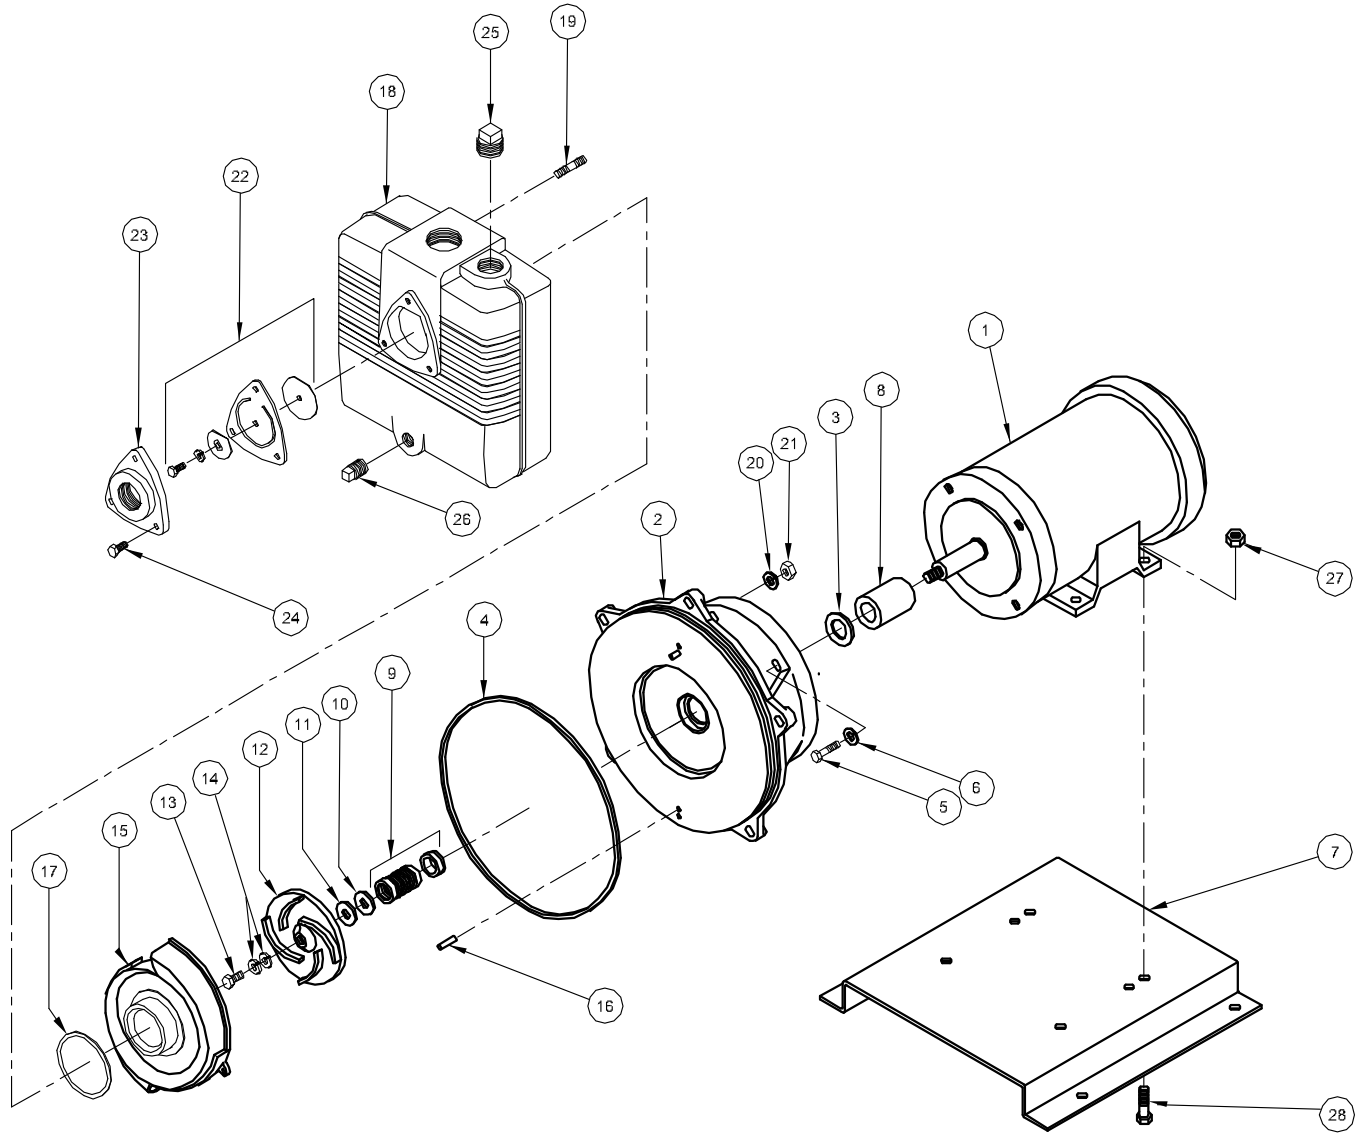

# SERIES: 15CCE, 20CCE, 25CCE

## PARTS KIT

**Seal Kit ..... P/N: 072918** (‡) 3, 4, 8, 9, 10, 11, 16, 17, 22C

## PARTS LIST

ITEM	QTY.	PART No.	DESCRIPTION
1	1	028496	Motor - 15CCE 200-230/460, ODP
	1	028497	Motor - 20CCE 200-230/460, ODP
	1	028498	Motor - 25CCE 200-230/460, ODP
	1	035185	Motor - 15CCE 200-230/460, TEFC
	1	028497F	Motor - 20CCE 200-230/460, TEFC
	1	028498D	Motor - 25CCE 200-230/460, TEFC
2	1	019553	Intermediate Coupling
3	1	005163 ‡	Slinger
4	1	018386 ‡	O-Ring
5	4	002266	Cap Screw 1/2-13 x 1.50" Lg, Steel
6	4	002608	Lock Washer 1/2" Steel
7	1	027174	Base, 15CCE
		027352	Base, 20CCE, 25CCE
8	1	018071 ‡	Shaft Sleeve
9	1	019146 ‡	Shaft Seal C/NR/B
10	A/R	001349 ‡	Shim, .010
11	A/R	001348 ‡	Shim, .031
12	1	090053TB	Impeller, 15CCE
	1	090050TB	Impeller, 20CCE
	1	051102	Impeller, 25CCE
13	1	019802	Hex Hd Screw 1/2-20 x 1.00" Lg, Stainless
14	2	019803	Washer, Shakeproof 1/2, Stainless
	1	070089	Washer, 25CCE Only
15	1	018883	Volute, 15CCE, 20CCE
	1	019102	Volute, 25CCE
16	2	017715 ‡	Pin, Volute
17	1	018388 ‡	Gasket, Volute
18	1	019042	Body
19	5	016409	Stud 1/2-13 x 2" Lg, Steel
20	7	002608	Lock Washer 1/2", Steel
21	3	15-6-6	Hex Nut 1/2-13, Zp
22	1	018387	Check Valve Assy.
22a	1	001588	Weight 2.75" O.D., Steel
22b	1	067500	Weight 4" O.D., Steel
22c	1	018008 ‡	Gasket Neoprene
22d	1	022333	Lock Washer 1/4", Stainless
22e	1	1-7-1	Hex Hd Screw 1/4-20 x 1.00" Lg, Stainless
22f	1	15-5-1	Hex Nut 1/4-20, Stainless
23	1	018884	Suction Flange, 15CCE
24	3	Q15-1-E26	Cap Screw 1/2-13 x 1.25" Lg, Steel
25	1	003205	Pipe Plug 1.00 NPT
26	1	003205	Pipe Plug 1.00 NPT
27	4	15-23-6	Hex Nut 3/8-16 Zp
28	4	002234	Hex Hd Screw 3/8-16 x 1.00"Lg, Stainless

BARNES®



burks®

WEINMAN®

DEMING®

PROSSER®

## Limited 24 Month Warranty

Crane Pumps & Systems warrants that products of our manufacture will be free of defects in material and workmanship under normal use and service for twenty-four (24) months after manufacture date, when installed and maintained in accordance with our instructions. This warranty gives you specific legal rights, and there may also be other rights which vary from state to state. In the event the product is covered by the Federal Consumer Product Warranties Law (1) the duration of any implied warranties associated with the product by virtue of said law is limited to the same duration as stated herein, (2) this warranty is a LIMITED WARRANTY, and (3) no claims of any nature whatsoever shall be made against us, until the ultimate consumer, his successor, or assigns, notifies us in writing of the defect, and delivers the product and/or defective part(s) freight prepaid to our factory or nearest authorized service station. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply.

**THE SOLE AND EXCLUSIVE REMEDY FOR BREACH OF ANY AND ALL WARRANTIES WITH RESPECT TO ANY PRODUCT SHALL BE TO REPLACE OR REPAIR AT OUR ELECTION, F.O.B. POINT OF MANUFACTURE OR AUTHORIZED REPAIR STATION, SUCH PRODUCTS AND/OR PARTS AS PROVEN DEFECTIVE. THERE SHALL BE NO FURTHER LIABILITY, WHETHER BASED ON WARRANTY, NEGLIGENCE OR OTHERWISE.** Unless expressly stated otherwise, guarantees in the nature of performance specifications furnished in addition to the foregoing material and workmanship warranties on a product manufactured by us, if any, are subject to laboratory tests corrected for field performance. Any additional guarantees, in the nature of performance specifications must be in writing and such writing must be signed by our authorized representative. Due to inaccuracies in field testing if a conflict arises between the results of field testing conducted by or for user, and laboratory tests corrected for field performance, the latter shall control. **RECOMMENDATIONS FOR SPECIAL APPLICATIONS OR THOSE RESULTING FROM SYSTEMS ANALYSES AND EVALUATIONS WE CONDUCT WILL BE BASED ON OUR BEST AVAILABLE EXPERIENCE AND PUBLISHED INDUSTRY INFORMATION. SUCH RECOMMENDATIONS DO NOT CONSTITUTE A WARRANTY OF SATISFACTORY PERFORMANCE AND NO SUCH WARRANTY IS GIVEN.**

This warranty shall not apply when damage is caused by (a) improper installation, (b) improper voltage (c) lightning (d) excessive sand or other abrasive material (e) scale or corrosion build-up due to excessive chemical content. Any modification of the original equipment will also void the warranty. We will not be responsible for loss, damage or labor cost due to interruption of service caused by defective parts. Neither will we accept charges incurred by others without our prior written approval.

This warranty is void if our inspection reveals the product was used in a manner inconsistent with normal industry practice and/or our specific recommendations. The purchaser is responsible for communication of all necessary information regarding the application and use of the product. **UNDER NO CIRCUMSTANCES WILL WE BE RESPONSIBLE FOR ANY OTHER DIRECT OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO TRAVEL EXPENSES, RENTED EQUIPMENT, OUTSIDE CONTRACTOR FEES, UNAUTHORIZED REPAIR SHOP EXPENSES, LOST PROFITS, LOST INCOME, LABOR CHARGES, DELAYS IN PRODUCTION, IDLE PRODUCTION, WHICH DAMAGES ARE CAUSED BY ANY DEFECTS IN MATERIAL AND/OR WORKMANSHIP AND/OR DAMAGE OR DELAYS IN SHIPMENT. THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER EXPRESS OR IMPLIED WARRANTY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

No rights extended under this warranty shall be assigned to any other person, whether by operation of law or otherwise, without our prior written approval.



PUMPS & SYSTEMS

A Crane Co. Company

420 Third Street  
Piqua, Ohio 45356  
(937) 778-8947  
Fax (937) 773-7157  
www.cranepumps.com

83 West Drive  
Brampton, Ont. Canada L6T 2J6  
(905) 457-6223  
Fax (905) 457-2650

**IMPORTANT!  
WARRANTY REGISTRATION**

Your product is covered by the enclosed Warranty.  
To complete the Warranty Registration Form go to:

<http://www.cranepumps.com/ProductRegistration/>

If you have a claim under the provision of the warranty, contact your local  
Crane Pumps & Systems, Inc. Distributor.

**RETURNED GOODS**

**RETURN OF MERCHANDISE REQUIRES A "RETURNED GOODS AUTHORIZATION".  
CONTACT YOUR LOCAL CRANE PUMPS & SYSTEMS, INC. DISTRIBUTOR.**



**Products Returned Must Be Cleaned, Sanitized,  
Or Decontaminated As Necessary Prior To Shipment,  
To Insure That Employees Will Not Be Exposed To Health  
Hazards In Handling Said Material. All Applicable Laws  
And Regulations Shall Apply.**