

### End Suction Pumps

ITEM NO.	SUCTION	1½	2	3	4	3	1½	2	3	4	6	2	2	3	4								
	DISCHARGE	1	1½	2	3	2½	1	1½	2	3	4	1	1½	2	3								
	MAX IMPELLER	6	6	6	6	7	8	8	8	8	8	10	10	10	10								
	IMPELLER BORE	¾	¾	1¼	¾	1¼	¾	1¼	¾	1¼	¾	1¼	¾	1¼	¾	1¼							
	FRAME 1B	X	X	X	X	X	X	X	X	X	X												
	FRAME 2B			X	X	X	X	X	X	X	X	X	X	X	X	X							
	SHAFT	A	A	B	A	B	A	B	A	B	A	B	A	B	A	B							
006																							
008	IMPELLER WEAR RING SUCTION SIDE ADAPTER SIDE	A A	B A	B A	C A	C A	D A	D A	C A	C A	B A	B A	B A	C A	C A	E A	E A	F A	B B	B B	C C	E B	
014	SLEEVE	A	A	B	A	B	A	B	A	B	A	B	A	B	A	B	B	B	B	B	B	B	B
016	INBOARD BEARING	A	A	B	A	B	A	B	A	B	A	B	A	B	A	B	B	B	B	B	B	B	B
018	OUTBOARD BEARING	A	A	B	A	B	A	B	A	B	A	B	A	B	A	B	B	B	B	B	B	B	B
025	CASING RING	A	B	B	C	C	D	D	C	C	E	E	B	B	C	C	F	F	G	E	B	C	F
027	ADAPTER RING	A	A	A	A	A	A	B	B	B	B	B	B	B	B	B	B	B	B	C	C	C	C
032	IMPELLER KEY	A	A	B	A	B	A	B	A	B	A	B	A	B	A	B	B	B	B	B	B	B	B
033	BEARING HOUSING	A	A	B	A	B	A	B	A	B	A	B	A	B	A	B	B	B	B	B	B	B	B
046	COUPLING KEY	A	A	B	A	B	A	B	A	B	A	B	A	B	A	B	B	B	B	B	B	B	B
047	INBOARD LIPSEAL	A	A	B	A	B	A	B	A	B	A	B	A	B	A	B	B	B	B	B	B	B	B
049	OUTBOARD LIPSEAL	A	A	B	A	B	A	B	A	B	A	B	A	B	A	B	B	B	B	B	B	B	B
071	ADAPTER	A	A	B	A	B	A	B	C	D	C	D	C	D	C	D	D	D	E	E	E	E	E
089	SEAL	A	A	B	A	B	A	B	A	B	A	B	A	B	A	B	B	B	B	B	B	B	B
273	ADAPTER FOOT	A	A	B	A	B	A	B	A	B	A	B	A	B	A	B	B	C	C	C	C	C	C
274	FRAME FOOT	A	A	B	A	B	A	B	A	B	A	B	A	B	A	B	B	C	C	C	C	C	C

# Interchangability Chart

Model 3121  
Bulletin 3000

# DEMING®

www.cranepumps.com

## End Suction Pumps

ITEM NO.	SUCTION	5	6	8	3	4	6						
	DISCHARGE	4	4	6	2	3	4						
	MAX IMPELLER	10	10	10	13	13	13						
	IMPELLER BORE	1/4	1/4	1/4	1/4	1/4	1/4	1/4					
	FRAME 3B	X	X	X	X	X	X	X					
	FRAME 4B		X	X	X	X	X	X					
	FRAME 5B												
006	SHAFT	C	D	C	D	C	D	C	D	C	D		
008	IMPELLER WEAR RING SUCTION SIDE ADAPTER SIDE	H B	H B	I B	I B	J B	J B	G C	G C	E C	E C	H C	H C
014	SLEEVE	B	C	B	C	B	C	B	C	B	C	B	C
016	INBOARD BEARING	C	D	C	D	C	D	C	D	C	D	C	D
018	OUTBOARD BEARING	C	D	C	D	C	D	C	D	C	D	C	D
025	CASING RING	H	H	I	I	J	J	K	K	F	F	H	H
027	ADAPTER RING	C	C	C	C	C	C	D	D	D	D	D	D
032	IMPELLER KEY	B	C	B	C	B	C	B	C	B	C	B	C
033	BEARING HOUSING	C	D	C	D	C	D	C	D	C	D	C	D
046	COUPLING KEY	B	C	B	C	B	C	B	C	B	C	B	C
047	INBOARD LIPSEAL	C	D	C	D	C	D	C	D	C	D	C	D
049	OUTBOARD LIPSEAL	B	C	B	C	B	C	B	C	B	C	B	C
071	ADAPTER	E	F	E	F	E	F	G	H	G	H	G	H
089	SEAL	B	C	B	C	B	C	B	C	B	C	B	C
273	ADAPTER FOOT	C	C	C	C	C	C	D	D	D	D	D	D
274	FRAME FOOT	C	B	C	B	C	B	E	F	E	F	E	F

SECTION 3120  
PAGE 12  
DATE 10/18

**CRANE®**

PUMPS & SYSTEMS

A Crane Co. Company

USA: (937) 778-8947 • Canada: (905) 457-6223 • International: (937) 615-3598