
Panel Wiring Diagram Model S2 PT RO

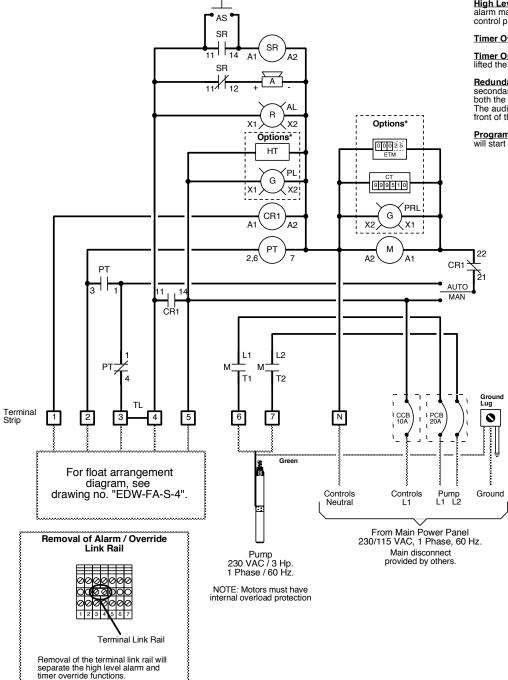

Simplex Operation

High Level Alarm: This float activates the alarm light and audible alarm when lifted. The audible alarm may be silenced by pressing the illuminated PUSH TO SILENCE button on the front of the control panel. The alarm light will remain on until the float is lowered.


Timer Override On & Off: This float turns on the pump when lifted and off when lowered.

Timer On & Off: This float turns off the programmable timer when lowered. When this float is lifted the timer will be restarted. Note: The timer will start with its off cycle.

<u>Redundant Off & Low Level Alarm:</u> This float turns off the pump when lowered. This float is a secondary off float which will operate if the Timer On & Off float fails. Pumping will be disabled in both the automatic and manual modes. This float also activates the alarm light and audible alarm. The audible alarm may be silenced by pressing the illuminated PUSH TO SILENCE button on the front of the control panel. The alarm light will remain on until the float is lifted.

Programmable Timer: The timer turns the pump on and off in a pre-set cycle. Note: The timer will start with its off cycle

	Кеу	FACSIMILE:
Remote Alarm Connections	= Factory Wire = Field Wire = Alternate Field Wire A = Audio Alarm, 115 VAC AL = Alarm Light AS = Audio Silence Switch CCB = Controls Circuit Breaker CR1 = Redundant Off Relay M = Motor Contactor PCB = Pump Circuit Breaker PT = Programmable Timer SR = Silence Control Relay TL = Terminal Link *Options CT = Cycle Counter ETM = Elapsed Time Meter HT = Heater	(541) 459-2884
during alarm conditions.	PL = Power Light PRL = Pump Run Light	

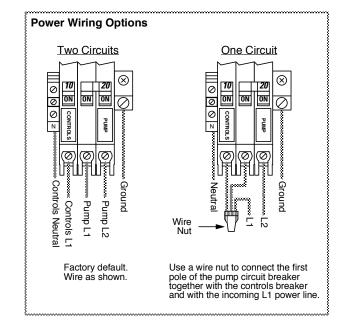



814 AIRWAY AVENUE

SUTHERLIN, OREGON