INSTALLATION INSTRUCTIONS



HYMAX GRIP® (3"- 12")

HYMAX GRIP® MJ CUT-IN-SLEEVE





CAUTION: THIS PRODUCT IS NOT INTENDED FOR USE ON NATURAL GAS PIPING, OR ANY OTHER TYPE OF GAS PIPING. THIS COULD RESULT IN ESCAPING GAS THAT COULD IGNITE AND CAUSE PROPERTY DAMAGE, SERIOUS INJURY OR DEATH.



IMPORTANT

THE HYMAX GRIP MJ Cut-In Sleeve is a stab-on type restraint coupling with an MJ connection on one side, that is approved for use with metal and plastic pipes when installing a new element on existing line.

THE HYMAX GRIP SERIES ARE STAB-ON TYPE COUPLINGS. Do not disassemble the product. Do not loosen the bolts

LUBRICATION OF PRODUCT AND PIPES except steel, PVC, and PE pipes, all rough-surfaced pipes must be lubricated with a water-based gasket lubricant in order to achieve a proper seal.

DO NOT LUBRICATE BOLTS AND NUTS. Bolts are pre-lubricated with a MAG (Molecular anti-galling) coating. Greasing bolts or nuts voids manufacturer's warranty.


TIGHTEN BOLTS TO THE TORQUE value provided on the label in one continuous step. Krausz products do not require a gradual increase of torque over a specified period, nor do they require re-torque. The minimal torque requirements must be achieved prior to any recharging of the line.

USE A TORQUE WRENCH TO TIGHTEN THE BOLTS. A torque wrench will assure a proper torque has been applied to the coupling. Do not use other tools to tighten the coupling's bolts!

PIPE STIFFENERS OR INSERTS ARE REQUIRED when used on HDPE pipes.

DO NOT USE HYMAX GRIP ON AC OR FRP PIPES!

PREPARE PRODUCT AND PIPE FOR INSTALLATION:

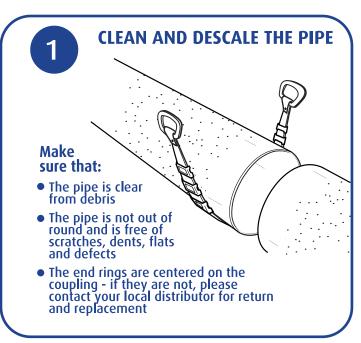


CUT THE PIPE ACCORDING TO:


 The width of the new element
 The G-min/G-max of the HYMAX GRIP

 Cut-in Sleeve product/s

 Both variants are indicated on the product label.

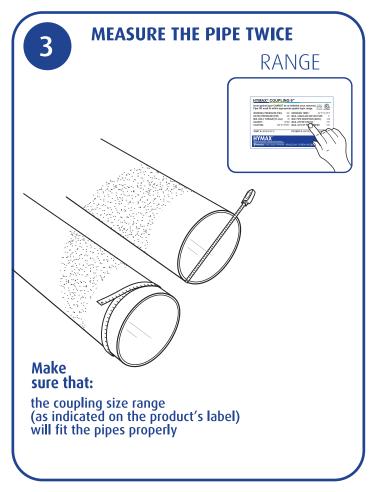

INSTALLATION OF THE COUPLING:

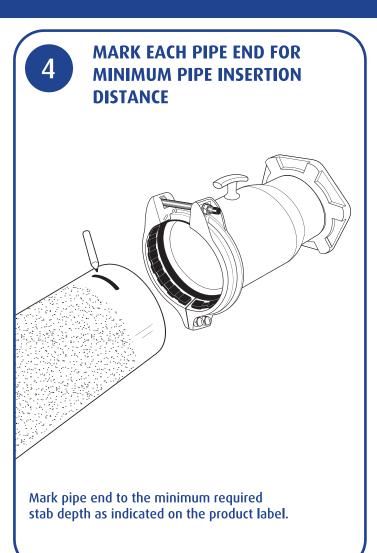



- Insert the MJ gasket unto the HYMAX GRIP CUT-IN SLEEVE. (not supplied with the product)
- Slide the product unto the pipe.
- Insert the new element and slide the product back in the direction of the new element.
- Tighten the bolts to the new element. Make sure that you don't slide the product beyond the marked G-min.









THE HYMAX GRIP FITS A WIDE RANGE OF PIPE SIZES. THE GRIP RANGE IS **SHOWN ON THE PRODUCT'S LABEL**

For size 3" only:

The inner gasket can be removed to accommodate larger OD pipes.

If a larger OD is required, fold the inner layer, separate the two gaskets by inserting a screwdriver between the two layers, and pull the layer out of the product.





В





NOTE: Do not remove the inner gasket unless the OD falls within the upper range of the product. The proper range sizes are shown on the product label.





Tighten the Grip's bolts to the right torque shown on the product label. When you finish, re-check the torque again.

RECHARGE

Recharge the line and check for leaks. If any leakage is evident, reduce the pressure in the line and increase bolt torque by up to 50%. For 3" size, increase bolt torque by up to 30%.

Verify again no leaks are evident along the seal.

